



# SHARP SERVICE MANUAL

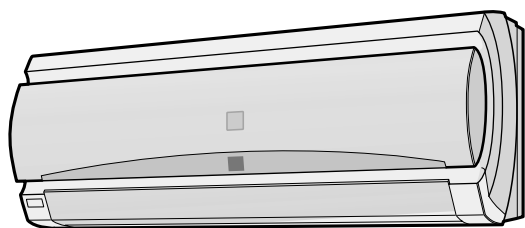

(INDOOR UNIT)

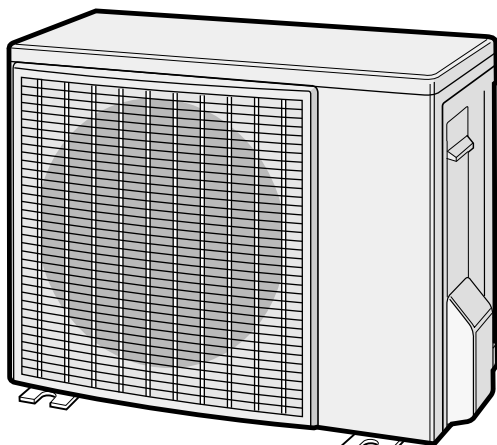

(OUTDOOR UNIT)

MODEL

## SPLIT TYPE ROOM AIR CONDITIONERS

INDOOR UNIT

MODELS **AY-XP07ER**

**AY-XP09ER**

**AY-XP12ER**

OUTDOOR UNIT

**AE-X07ER**

**AE-X09ER**

**AE-X12ER**

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

### TABLE OF CONTENTS

	Page
SPECIFICATIONS .....	2
EXTERNAL DIMENSIONS .....	3
WIRING DIAGRAMS .....	4
ELECTRICAL PARTS .....	5
REFRIGERATION CYCLE .....	6
PERFORMANCE CURVES .....	7
REPLACEMENT PARTS LIST	
AY-XP07ER / AY-XP09ER / AY-XP12ER .....	8
AE-X07ER / AE-X09ER / AE-X12ER .....	11

## SPECIFICATIONS

ITEMS	MODEL	INDOOR UNIT	OUTDOOR UNIT	INDOOR UNIT	OUTDOOR UNIT	INDOOR UNIT	OUTDOOR UNIT
		AY-XP07ER	AE-X07ER	AY-XP09ER	AE-X09ER	AY-XP12ER	AE-X12ER
Cooling capacity(Min. ~ Max.)	kW	2.1 (0.9 – 3.0)		2.6 (0.9 – 3.0)		3.5 (0.9 – 4.0)	
Heating capacity(Min. ~ Max.)	kW	3.0 (0.9 – 4.0)		3.6 (0.9 – 5.0)		4.6 (0.9 – 6.0)	
Moisture removal(at cooling)	Liters/h						

### Electrical data

Phase			Single					
Rated frequency		Hz	50					
Rated voltage		V	230					
Rated current ★ (Min - Max.)	Cool	A	2.6 (0.8 – 4.6)		3.3 (0.8 – 4.6)		4.6 (0.8 – 6.4)	
	Heat	A	3.7 (0.7 – 6.5)		4.1 (0.7 – 6.5)		5.2 (0.7 – 8.1)	
Rated input ★ (Min - Max.)	Cool	W	510 (150 – 900)		650 (150 – 900)		960 (150 – 1400)	
	Heat	W	730 (130 – 1400)		900 (130 – 1400)		1190 (130 – 1800)	
Power factor ★	Cool	%	85		86		91	
	Heat	%	86		95		99	
Compressor	Type		Hermetically sealed rotary type					
	Model		5RS092XDF					
	Oil charge		320cc (RB68A or Freol Alphc 68M)					
Refrigerant system	Evaporator		Louver Fin and Grooved tube type					
	Condenser		Corrugate Fin and Grooved tube type					
	Control		Expansion valve					
	Refrigerant (R410A)		1000g		1000g		1080g	
	De-Ice system		Micro computer controlled reversed systems					
Noise level (at cooling)	High	dB(A)	38	46	43	48	45	49
	Low	dB(A)	32	–	34	–	38	–
	Soft	dB(A)	26	–	28	–	31	–

### Fan system

Drive			Direct drive					
Air flow quantity (at cooling)	High	m³/min.	7.8	22	9.9	22	11.2	24
	Low	m³/min.	6.8	–	7.7	–	9.0	–
	Soft	m³/min.	5.2	–	6.0	–	6.8	–
Fan			Cross flow fan	Propeller fan	Cross flow fan	Propeller fan	Cross flow fan	Propeller fan

### Connections

Refrigerant coupling	Flare type		
Refrigerant tube size Gas, Liquid	3/8", 1/4"		1/2", 1/4"
Drain piping mm	O.D ø 18		

### Others

Safety device			Compressor: Thermal protector					
			Fan motors: Thermal fuse					
			Fuse, Micro computer control					
Air filters			Polypropylene net (Washable)					
Net dimensions	Width	mm	810	730	810	730	810	780
	Height	mm	285	540	285	540	285	540
	Depth	mm	240	250	240	250	240	265
Net weight		kg	11	36	11	36	11	37

Note: The condition of star " ★ " marked item are 'ISO5151' : 1994(E), condition T1.

## EXTERNAL DIMENSIONS

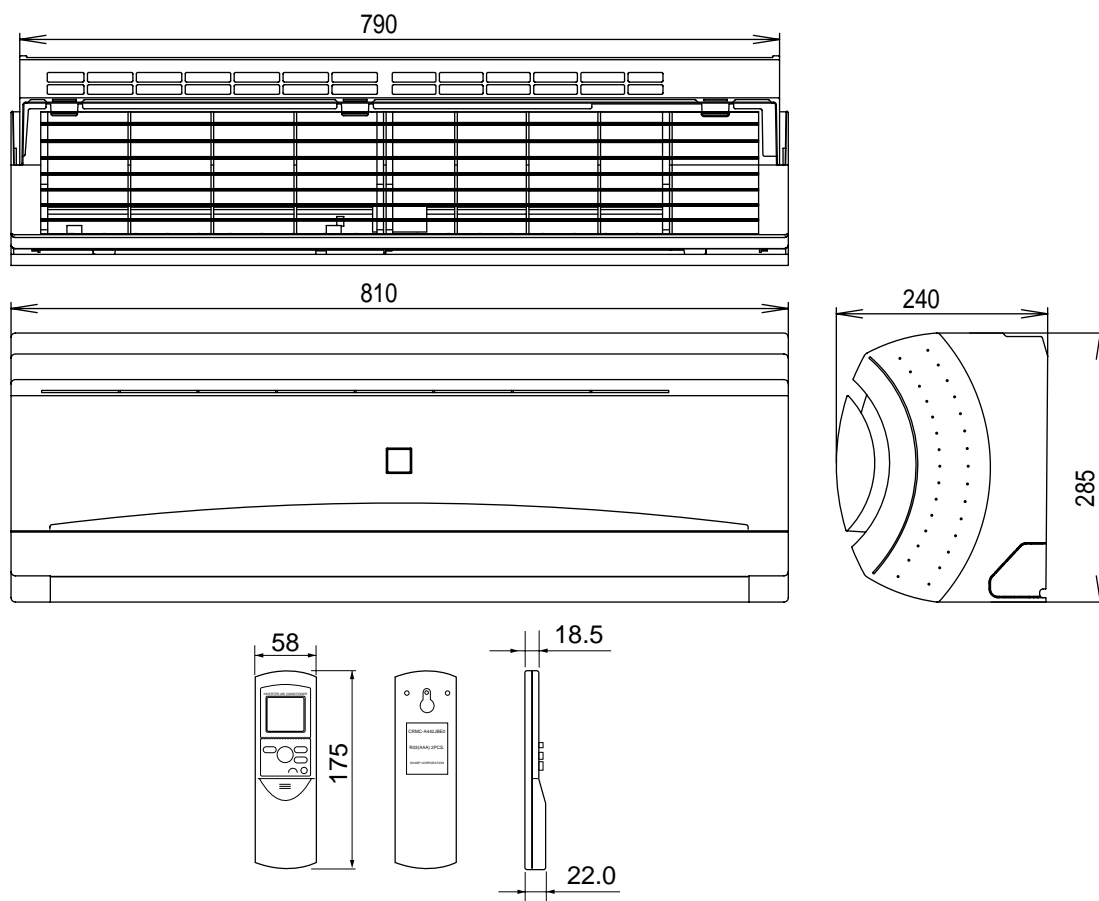


Figure E-1. INDOOR UNIT

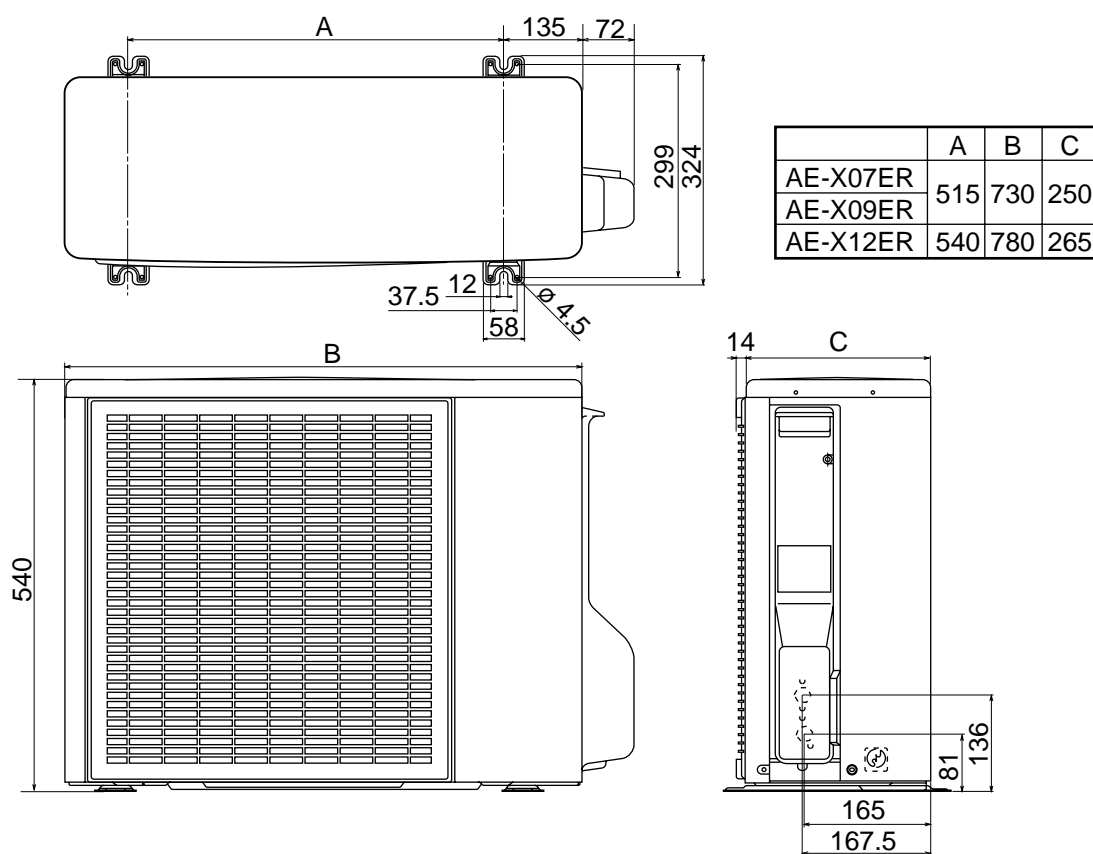


Figure E-2. OUTDOOR UNIT

WIRING DIAGRAMS

LED INDICATION FOR SELF-DIAGNOSIS

Temperature Indicator Blinking No.	Abnormal contents
1	Short circuit of the Thermistor
2	Overheat error (compressor and cycle)
5	Open circuit of the Thermistor
6	Abnormal DC current
7	Abnormal AC current
9	Abnormal Thermistor or four way valv
11	Abnormal outdoor fan motor
13	Rotation error of the compressor or compressor lock
14	Abnormal PAM voltage and PAM clock signal
17	Open circuit of serial signal line
18	Short circuit of serial signal line
19	Abnormal fan motor of indoor unit

<Indication of the abnormal condition>  
LED indicator will blink, if the set is in abnormal condition.

WIRING DIAGRAM <CB878>

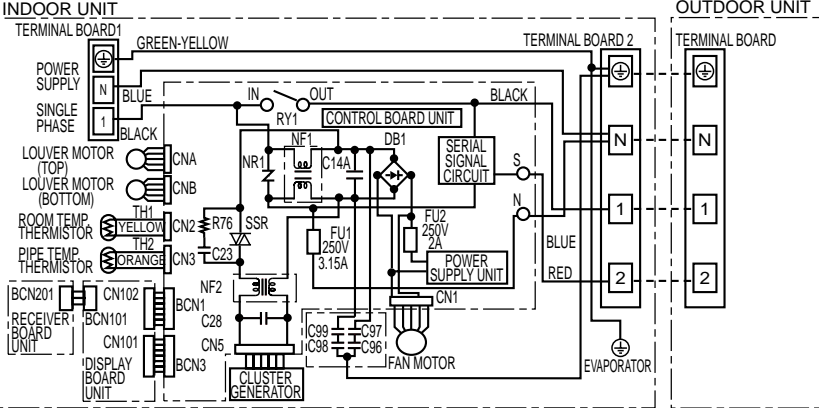


Figure W-1. Wiring Diagram for AY-XP07ER / AY-XP09ER / AY-XP12ER

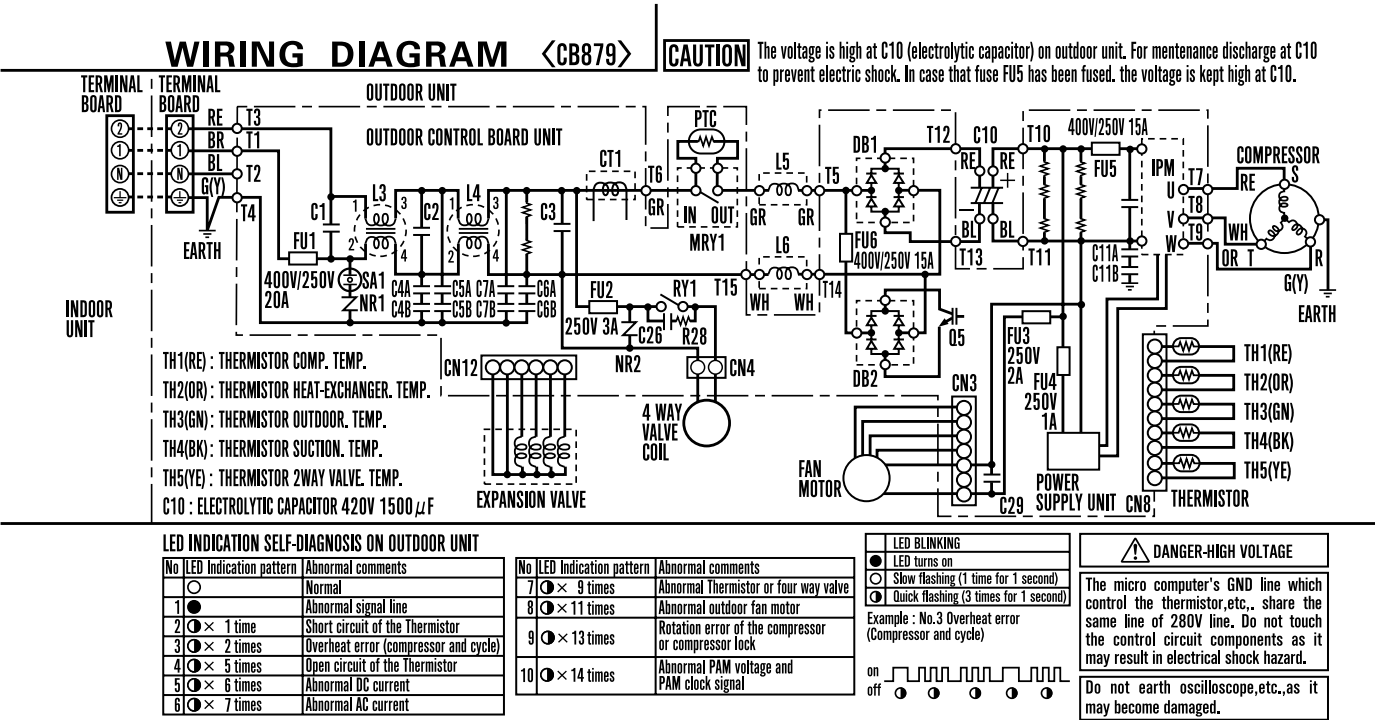


Figure W-2. Wiring Diagram for AE-X07ER / AE-X09ER / AE-X12ER

## ELECTRICAL PARTS


### For Model AY-XP07ER / AY-XP09ER / AY-XP12ER

DESCRIPTION	MODEL	REMARKS
Indoor fan motor	MLB084	DC Motor
Indoor fan motor capacitor	—	—
Transformer	—	—
FUSE1	—	QFS-GA052JBZZ (250V, 3.15A)
FUSE2	—	QFS-GA051JBZZ (250V, 2A)


### For Model AE-X07ER / AE-X09ER / AE-X12ER

DESCRIPTION	MODEL	REMARKS
Compressor	5RS092XDF	D.C. brush-less motor
Outdoor fan motor	ML-A902	DC Motor
Outdoor fan motor capacitor	—	—
WPE1	—	QFS-GA050JBZZ(250V, 1A)
WPE101	—	QFS-GA051JBE0(250V, 2A)
WPE3	—	QFS-GA052JBZZ(250V, 3.15A)
WPE5	—	QFS-GA065JBZZ(400V, 20A)
	—	QFS-GA066JBZZ(400V, 15A)

## REFRIGERATION CYCLE

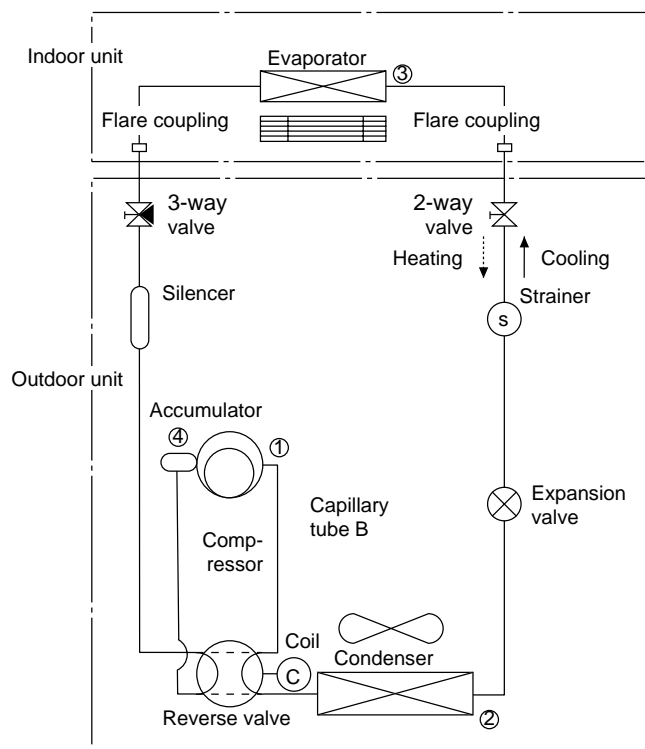

Flow for Refrigerant for AY-XP07ER / AY-XP09ER

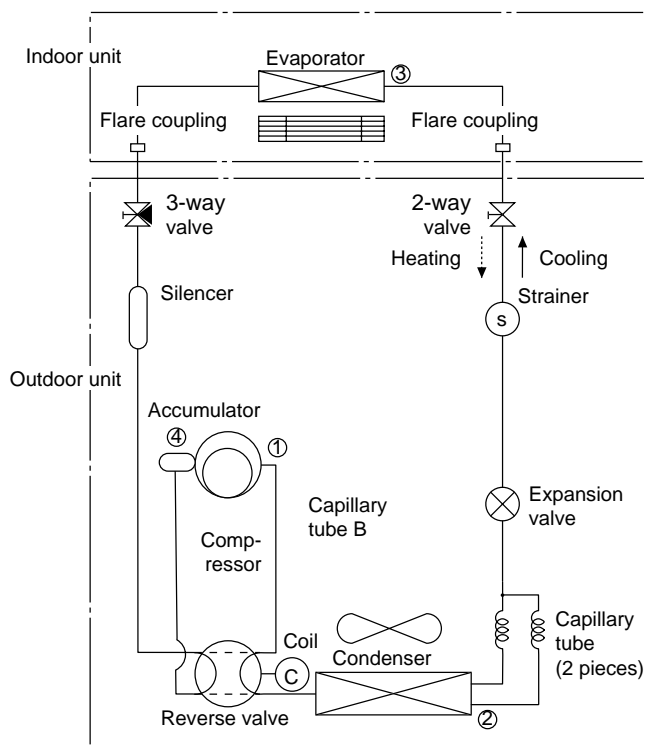

Flow for Refrigerant for AY-XP12ER

### Standard conditions:

AY-XP07ER / AY-XP09ER / AY-XP12ER

※ REFRIGERANT PIPE LENGTH 7.5m

	Indoor side		Outdoor side	
	Dry-bulb Temp. (°C)	Relative Humidity (%)	Dry-bulb Temp. (°C)	Relative Humidity (%)
Cooling	27	47	35	40
Heating	20	—	7	87

### Temperature at each part and pressure in 3-way valve


Model	AY-XP07ER		AY-XP09ER		AY-XP12ER	
NO. Condition	Cooling	Heating	Cooling	Heating	Cooling	Heating
①	72	78	72	78	74	80
②	40	1	40	1	42	2
③	15	28	15	28	14	30
④	16	2	16	2	14	2
3-way valve pressure (MPaG)	1.00	2.60	1.00	2.60	1.00	2.60

### Dimension of Capillary tube


Model	AY-XP12ER		
	O.D	I.D	L
Capillary tube	ø2.7	ø1.7	300

## PERFORMANCE CURVES


- NOTE: 1) Indoor fan speed: Hi  
2) Vertical adjustment louver "45°", Horizontal adjustment louver "front"  
3) Indoor air temp. : Cooling 27°C, Heating 20°C  
4) Power source : 230V, 50Hz

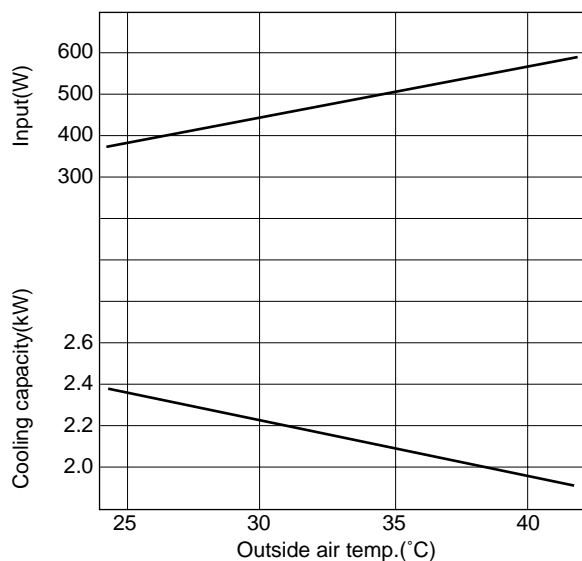


**Figure P-1. At Cooling for AY-XP07ER**

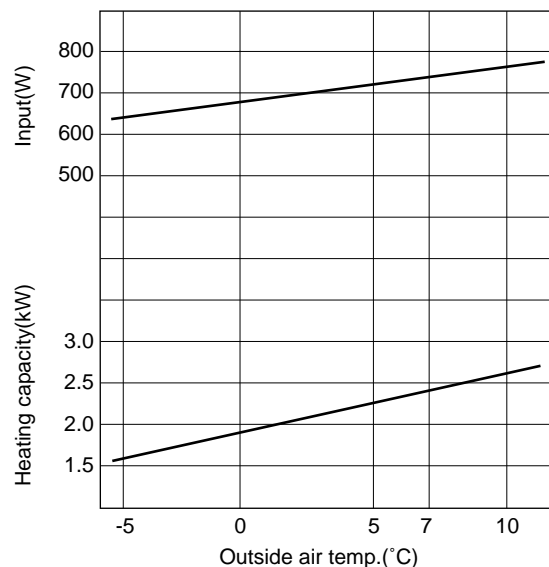


**Figure P-2. At Heating for AY-XP07ER**

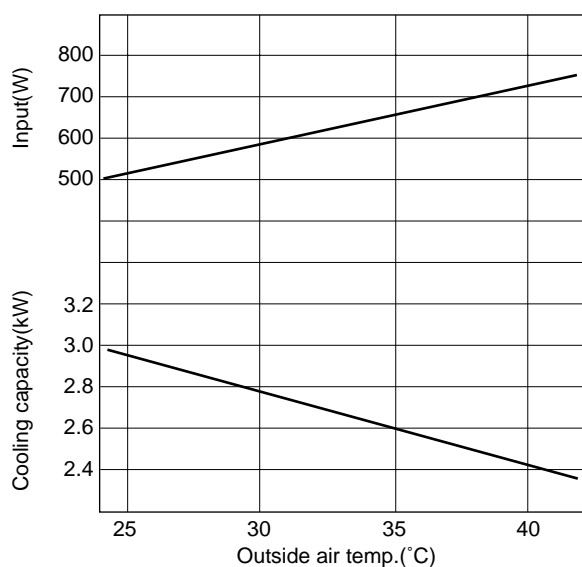


**Figure P-3. At Cooling for AY-XP09ER**

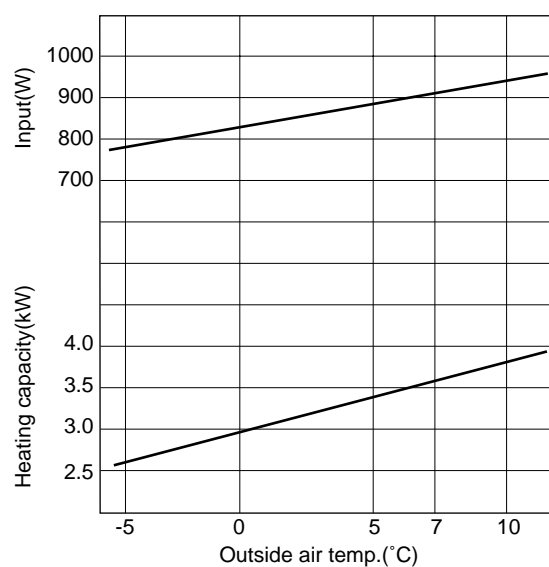

**Figure P-4. At Heating for AY-XP09ER**

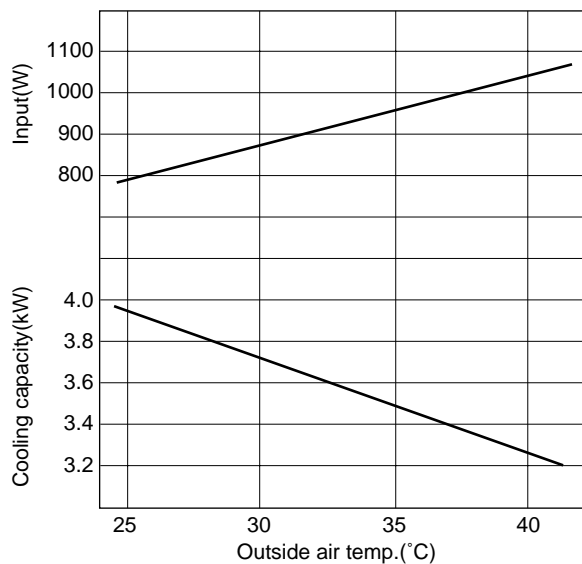

**Figure P-5. At Cooling for AY-XP12ER**

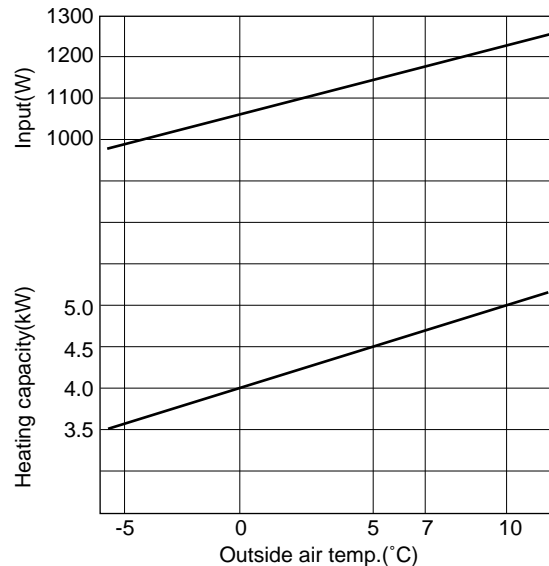

**Figure P-6. At Heating for AY-XP12ER**

## REPLACEMENT PARTS LIST (AY-XP07ER / AY-XP09ER / AY-XP12ER)

REF. NO.	PART NO.	DESCRIPTION	Q'TY	CODE
<b>CONTROLBOX PARTS</b>				
1- 1	CMOT-A433JBKZ	Fan motor sub ass'y	1	BK
1- 2	DSGY-B540JBKZ	Control board unit [AYXP07ER]	1	BU
1- 2	DSGY-B532JBKZ	Control board unit [AYXP09ER]	1	BU
1- 2	DSGY-B550JBKZ	Control board ass'y [AYXP12ER]	1	BU
1- 2-1	QFS-GA051JBZZ	Fuse	1	AD
1- 2-2	QFS-GA052JBZZ	Fuse	1	AD
1- 3	QACC-A298JBZZ	Power supply cord	1	
1- 4	QTANZA001JBZZ	Terminal board	1	AQ
1- 5	QTANZA018JBZZ	Terminal board	1	
1- 6	RH-HXA014JBZZ	Thermister ass'y	1	AG
1- 7	RTHM-A292JBE0	Thermistor	1	AH
1- 8	QW-VZE403JBZZ	Lead wire	1	AH
1- 9	RMOT-A110JBZZ	Louver motor	1	AN
1- 10	RMOT-A108JBEZ	Louver motor-b	1	AN
1- 11	CKITTA013JBKZ	Plasmacluster unit	1	AZ
<b>CABINET AND UNIT PARTS</b>				
2- 1	CHLD-A050JBK0	Bearing ass'y	1	AG
2- 2	PGUMMA206JBE0	Motor cushion	1	
2- 3	PGUMMA207JBE0	Motor cushion	1	
2- 4	DCHS-A502JBKZ	Cabinet ass'y	1	BA
2- 5	PGID-A108JBFA	Guide	1	AL
2- 6	NFANCA087JBKZ	Crossflow fan	1	BA
2- 7	PCOV-A845JBFZ	Motor cover	1	AG
2- 8	CCOV-A093JBKZ	Louver cover ass'y	1	
2- 8-1	FCOV-A155JBFA	Cover	1	
2- 8-2	MHNG-A031JBFA	Cover hinge	1	AC
2- 8-3	PCOV-B005JBFA	Louver cover	1	AF
2- 9	PCOV-A849JBFZ	Side cover	1	AF
2- 10	PGID-A109JBFZ	Guide	2	AF
2- 11	CLOV-A054JBKZ	Direct.louver ass'y	1	AN
2- 11-1	MLOV-A385JBFA	Air direction louver	1	
2- 11-2	NBRG-A030JBFA	Bearing	1	AB
2- 11-3	NBRG-A037JBFA	Bearing	1	AE
2- 12	CPNL-A485JBKZ	Cont.box cover ass'y	1	AQ
2- 13	FCOV-A143JBFZ	Senser cover	1	AD
2- 14	PCOV-A992JBFZ	Led holder	1	AD
2- 15	PCOV-B010JBFA	Led cover	1	
2- 16	LHLD-A449JBF0	Thermistor holder	1	AH
2- 17	LHLD-A690JBFZ	Senser holder	1	BD
2- 18	PBOX-A432JBFZ	Control box	1	BF
2- 19	PCOV-A847JBPZ	Cont.box cover	1	AG
2- 20	CSRA-A577JBKZ	Drain pan ass'y	1	
2- 20-1	CHOS-A015JBKZ	Drain hose ass'y	1	
2- 20-10	MJNTPA095JBFA	Louver link	2	AB
2- 20-11	MLOV-A346JBFA	Vertical louver	9	AB
2- 20-12	MLOV-A347JBFA	Vertical louver	1	AB
2- 20-13	MLOV-A386JBTA	Air flow louver	1	AS
2- 20-14	NBRG-A028JBFA	Bearing	1	AB
2- 20-15	NBRG-A031JBFA	Bearing	1	AC
2- 20-16	NBRG-A038JBFA	Bearing c	1	AC
2- 20-17	PGUMMA169JBE0	Drain plug	1	AD
2- 20-2	DSRA-A258JBKZ	Drain pan sub ass'y	1	
2- 20-3	GGAD-A057JBTA	Wire guard	1	
2- 20-4	PSRA-A161JBFA	Drain pan	1	
2- 20-5	LHLD-A615JBFA	Louver stopper	1	AC
2- 20-6	LHLD-A682JBFA	Led holder	1	AE
2- 20-7	LHLD-A691JBFZ	Lead wire guide	2	AE
2- 20-8	LPFT-A144JBFZ	Dorain joint	1	AD
2- 20-9	LPFT-A147JBFZ	Dorain joint 1	1	



REF. NO.	PART NO.	DESCRIPTION	Q'TY	CODE
2- 21	CPNL-A486JBKZ	Open panel ass'y	1	BC
2- 21-1	HBDG-A144JBEA	Badge	1	AF
2- 21-2	HDECQA097JBRA	Display panel	1	AF
2- 21-3	HDECQA098JBRA	Display panel	1	AX
2- 21-4	HPNL-A672JBTA	Open panel	1	
2- 21-5	LHLD-A680JBFA	Holder	1	AD
2- 21-6	LHLD-A681JBFZ	Display holder	6	AC
2- 22	DWAK-A869JBKZ	Front panel ass'y	1	AS
2- 22-1	GWAK-A300JBFA	Front panel	1	AV
2- 22-2	TLABCB878JBRZ	Wiring diagram	1	AC
2- 23	DHLD-A009JBK0	Pipe holder ass'y	1	AE
2- 24	LHLD-A689JBFA	Holder	1	AG
2- 25	LHLD-A394JBFA	Pipe holder	1	AD
2- 26	PCOV-A848JBFZ	Drain cover	1	AD
2- 27	PCOV-B006JBFA	Screw cover	3	AD
2- 28	PFILMA191JBEZ	Air filter	1	AL
2- 29	PPLTNA078JBPZ	Mounting angle	1	AU
2- 30	TSPC-E666JBRZ	Name badge [AYXP07ER]	1	
2- 30	TSPC-E651JBRZ	Name badge [AYXP09ER]	1	
2- 30	TSPC-E681JBRZ	Name badge [AYXP12ER]	1	AC

#### CYCLE PARTS

3- 1	CPIPCA796JBKZ	Inlet tube ass'y [AYXP07ER] [AYXP09ER]	1	AX
3- 1	CPIPCA813JBKZ	Inlet tube ass'y [AYXP12ER]	1	
3- 2	DEVA-A189JBKZ	Evaporator ass'y	1	BS
3- 3	LX-NZA169JBE0	Flare nut1/4	1	AG
3- 4	PCAP-A064JBE0	Cap 1/4	1	

#### ACCESSORY PARTS

4- 1	CFIL-A088JBKZ	Purify filter ass'y	1	AR
4- 2	CRMC-A629JBEZ	Remote control	1	BB
4- 3	FFZK-A178JBKZ	Screws kit	1	
4- 4	LHLD-A688JBFA	Cord holder	1	AE
4- 5	LPFT-A088JBF0	Drain joint	1	AC
4- 6	SSAKHA149YDE0	Bag	1	AC
4- 7	TINS-A811JBRZ	Installation manual1	1	AL
4- 8	TINS-A812JBRZ	Installation manual2	1	AL
4- 9	TINSEA363JBRZ	Operation manual	1	AS
4- 10	UBATUA027JBE0	Battery pack	1	AE


#### PACKING PARTS

90- 1	CPADBA059JBKZ	Packing pad ass'y	2	AK
90- 2	SPADBA189JBEZ	Pad	1	AD
90- 3	SPAKCB549JBEZ	Packing case [AYXP07ER]	1	
90- 3	SPAKCB537JBEZ	Packing case [AYXP09ER]	1	
90- 3	SPAKCB568JBEZ	Packing case [AYXP12ER]	1	AR

#### HOW TO ORDER REPLACEMENT PARTS

To have your order filled promptly and correctly, please furnish the following information.

1. MODEL NUMBER    2. REF. NO.    3. PART NO.    4. DESCRIPTION

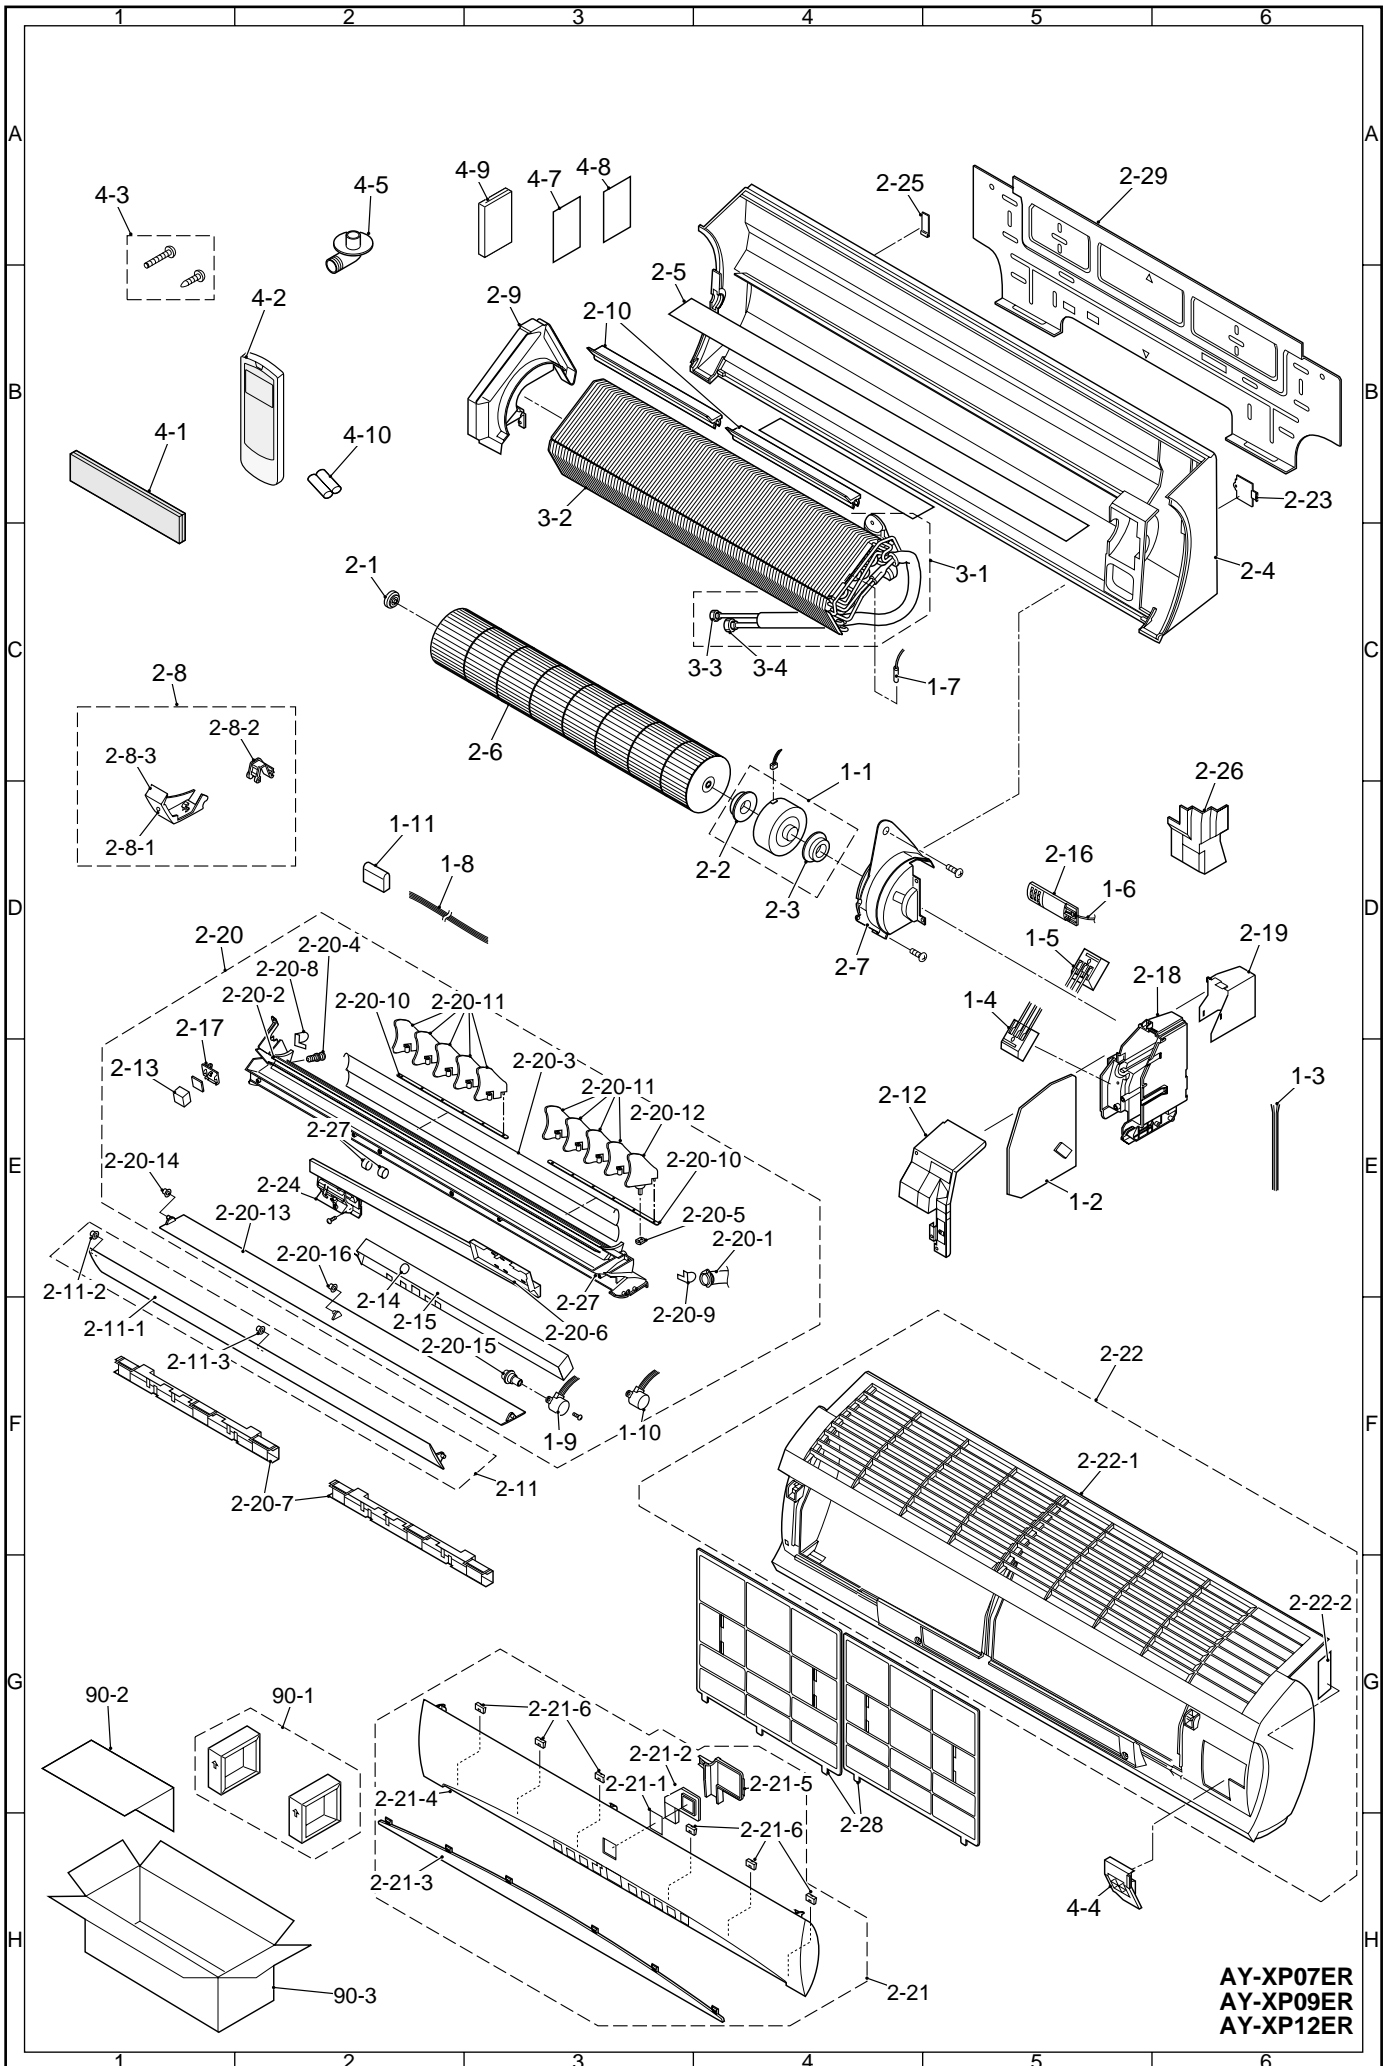

AY-XP07ER  
AY-XP09ER  
AY-XP12ER

## REPLACEMENT PARTS LIST (AE-X07ER / AE-X09ER / AE-X12ER)

REF. NO.	PART NO.	DESCRIPTION	Q'TY	CODE
<b>CONTROLBOX PARTS</b>				
1- 1	CMOTLB078JBEZ	Fan moter	1	BL
1- 2	DSGY-B541JBKZ	Control board ass'y [AEX07ER]	1	CB
1- 2	DSGY-B531JBKZ	Control board ass'y [AEX09ER]	1	CB
1- 2	DSGY-B549JBKZ	Control board ass'y [AEX12ER]	1	CC
1- 2-1	QFS-GA050JBZZ	Fuse	1	AD
1- 2-2	QFS-GA051JBZZ	Fuse	1	AD
1- 2-3	QFS-GA052JBZZ	Fuse	1	AD
1- 2-4	QFS-GA058JBZZ	Fuse	1	AV
1- 2-5	QFS-GA059JBZZ	Fuse	2	AU
1- 2-6	RH-IXA694JBZZ	Ipm [AEX07ER] [AEX09ER]	1	BD
1- 2-6	RH-IXA732JBZZ	Ipm [AEX12ER]	1	BF
1- 3	QW-VZE511JBZZ	Lead wire [AEX07ER] [AEX09ER]	1	AM
1- 3	QW-VZE172JBZZ	Lead wire [AEX12ER]	1	
1- 4	RCILZA009JBZZ	Reactor	2	BA
1- 5	RTHM-A022JBE0	Thermistor	1	AN
1- 6	QTANZA001JBZZ	Terminal board	1	AQ
1- 7	QW-VZE497JBZZ	Lead wire	1	AG
1- 8	QW-VZE498JBZZ	Lead wire	1	AG
1- 9	QW-VZE499JBZZ	Lead wire	1	AF
1- 10	RFIL-A064JBE0	Ferrite core	4	AF
1- 11	RH-HXA029JBZZ	Thermistor ass'y	1	AX
<b>CABINET AND UNIT PARTS</b>				
2- 1	LANGKA157JBPZ	Motor angle	1	AQ
2- 2	CCAB-A367JBKZ	Top plate ass'y [AEX07ER] [AEX09ER]	1	
2- 2	CCAB-A368JBKZ	Top plate ass'y [AEX12ER]	1	
2- 3	TLABCB879JBRZ	Wiring diagram [AEX07ER] [AEX09ER]	1	AC
2- 3	TLABCB879JBRZ	Wiring diagram [AEX12ER]	1	AC
2- 4	LX-BZA261JBEZ	Special screw	4	AC
2- 5	PCOV-A881JBFA	Reactor cover [AEX07ER] [AEX09ER]	1	AL
2- 6	LANG-A504JBYZ	Reactor angle [AEX12ER]	1	AP
2- 7	CFTA-A268JBKZ	Cover	1	AN
2- 7-1	PCOV-A594JBPZ	Terminal cover	1	AE
2- 7-2	PFTA-A090JBFA	Cover	1	AL
2- 8	PRDAFA170JBEZ	Heat sink	1	AR
2- 9	FDIA-A006JBWZ	Capacitor angle assy	1	AG
2- 10	LBNDKA105JBWZ	Capacitor clamp	1	AD
2- 11	PBOX-A396JBFZ	Control box	1	AP
2- 12	PDAI-A138JBWZ	Terminal base [AEX07ER] [AEX09ER]	1	AG
2- 12	PDAI-A134JBWZ	Terminal base [AEX12ER]	1	
2- 13	PCOV-A595JBFZ	Cover	1	AE
2- 14	PSKR-A258JBPZ	Bulkhead [AEX07ER] [AEX09ER]	1	AH
2- 14	PSKR-A283JBPZ	Bulkhead [AEX12ER]	1	AS
2- 15	GCAB-A237JBTA	Front panel [AEX07ER] [AEX09ER]	1	AY
2- 15	GCAB-A220JBTA	Front panel [AEX12ER]	1	BC
2- 16	GGADPA004JBFA	Fan guard [AEX07ER] [AEX09ER]	1	AR
2- 16	GGADPA007JBFA	Fan gaurd [AEX12ER]	1	AS
2- 17	JHNDPA015JBFA	Handle	1	AD
2- 18	LHLD-A449JBF0	Thermistor holder	1	AH
2- 19	LHLD-A491JBFZ	Cord clamp	1	
2- 20	LHLD-A492JBFZ	Cord clamp base	1	
2- 21	MSPR-A026JBE0	Spring	2	AB
2- 22	MSPR-A027JBE0	Thermistor spring [AEX07ER] [AEX09ER]	1	AB
2- 23	MSPR-A036JBE0	Thermistor spring [AEX12ER]	1	AB
2- 24	MSPR-A143JBEZ	Spring [AEX12ER]	1	AD
2- 25	NFANPA110JBEZ	Propeller fan [AEX07ER] [AEX09ER]	1	AQ
2- 25	NFANPA118JBEZ	Propeller fan [AEX12ER]	1	AU
2- 26	PPLT-A370JBTZ	Side cover r [AEX07ER] [AEX09ER]	1	
2- 26	PPLT-A375JBTA	Side cover r [AEX12ER]	1	AW
2- 27	PSPF-A871JBEZ	Comp cover top [AEX07ER] [AEX09ER]	1	AF

REF. NO.	PART NO.	DESCRIPTION	Q'TY	CODE
2- 27	PSPF-A918JBEZ	Comp cover top [AEX12ER]	1	AT
2- 28	PSPF-A878JBEZ	Compressor cover [AEX07ER] [AEX09ER]	1	AT
2- 28	PSPF-A919JBEZ	Compressor cover [AEX12ER]	1	AE
2- 29	PSPF-A879JBEZ	Compressor cover b [AEX07ER] [AEX09ER]	1	AD
2- 30	CANG-A165JBKZ	Holder ass'y [AEX12ER]	1	AH
2- 31	TLAB-C511JBRA	Label	1	AC
2- 32	TLABMA356JBRA	Inverter label	1	
2- 33	TSPC-E667JBRZ	Name badge [AEX07ER]	1	AC
2- 33	TSPC-E650JBRZ	Name badge [AEX09ER]	1	AC
2- 33	TSPC-E679JBRZ	Name badge [AEX12ER]	1	AC

#### CYCLE PARTS

3- 1	CCHS-A842JBTA	Base pan ass'y [AEX07ER] [AEX09ER]	1	
3- 1	CCHS-A884JBTA	Base pan ass'y [AEX12ER]	1	AW
3- 2	DVLV-A571JBKZ	3way valve unit [AEX07ER] [AEX09ER]	1	AU
3- 2	DVLV-A657JBKZ	3way valve unit [AEX12ER]	1	AV
3- 3	LX-NZA270JBEZ	Service nut	1	
3- 4	LX-NZA271JBEZ	Bonnet [AEX07ER] [AEX09ER]	1	
3- 4	LX-NZA307JBEZ	Bonnet [AEX12ER]	1	
3- 5	DVLV-A572JBKZ	2way valve unit	1	AQ
3- 6	LX-NZA271JBEZ	Bonnet	1	
3- 7	DVLV-A581JBKZ	Control valve ass'y [AEX07ER] [AEX09ER]	1	BG
3- 7	DVLV-A653JBKZ	Control valve ass'y [AEX12ER]	1	
3- 8	CCIL-A129JBKZ	Coil ass'y	1	AU
3- 9	PVLVXA052JBEZ	Reverse valve [AEX07ER] [AEX09ER]	1	BB
3- 9	PVLVXA061JBEZ	Reverse valve [AEX12ER]	1	BD
3- 10	PDAI-A123JBTA	Flare coupling base	1	
3- 11	PGUM-A008JBE0	Damper rubber	1	AF
3- 12	DCON-A242JBPZ	Condenser ass'y [AEX07ER] [AEX09ER]	1	BV
3- 12	DCON-A241JBPZ	Condenser ass'y [AEX12ER]	1	BV
3- 13	PCMPRA430JBEZ	Compressor	1	CC
3- 14	GLEG-A099JBE0	Compressor cushion	3	AD
3- 15	LX-NZA026JBE0	Special nut	3	


#### PACKING PARTS

90- 1	CPADBA773YDKZ	Top pad ass'y [AEX07ER] [AEX09ER]	1	AG
90- 1	CPADBA048JBKZ	Top pad ass'y [AEX12ER]	1	
90- 2	CPADBA774YDKZ	Bottom pad ass'y [AEX07ER] [AEX09ER]	1	AN
90- 2	CPADBA049JBKZ	Bottom pad ass'y [AEX12ER]	1	
90- 3	SPAKCB550JBEZ	Packing case [AEX07ER]	1	
90- 3	SPAKCB536JBEZ	Packing case [AEX09ER]	1	
90- 3	SPAKCB565JBEZ	Packing case [AEX12ER]	1	AU

#### HOW TO ORDER REPLACEMENT PARTS

To have your order filled promptly and correctly, please furnish the following information.

1. MODEL NUMBER    2. REF. NO.    3. PART NO.    4. DESCRIPTION

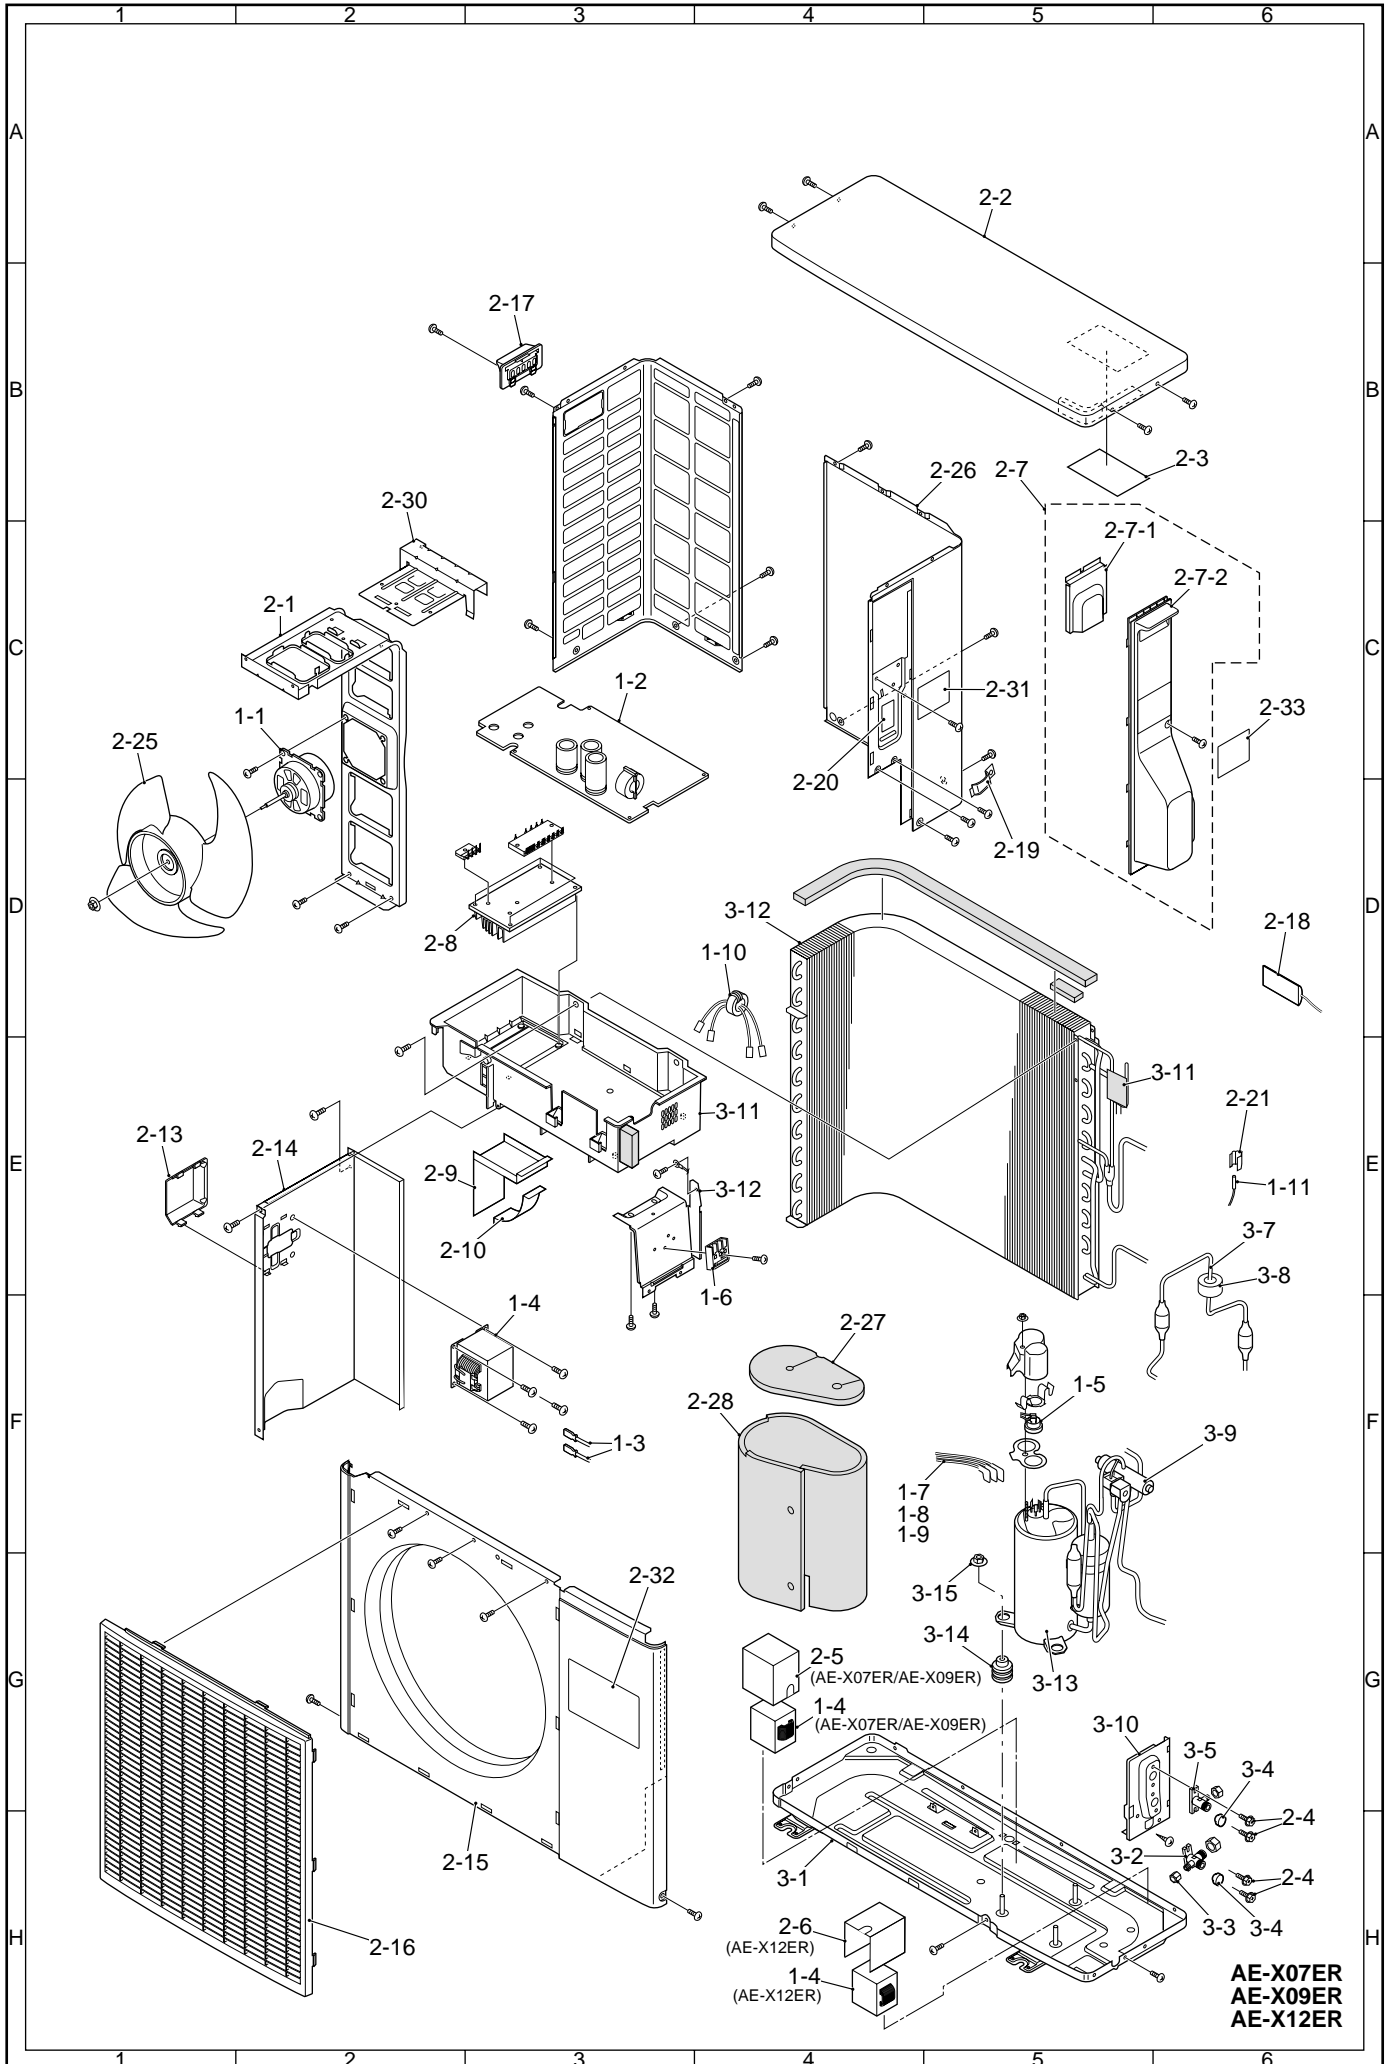

## MEMO

## MEMO

# SHARP